



## PLANTA DE UBICACIÓN ESC. 1/50

CUADRO DE PROPIEDADES ZAPATAS

Nombre	Sección (cm)	Pilar								Fundación				
		X (cm)	Y (cm)	Carga Máx. (tf)	Carga Mín. (tf)	Mx (kgf.m)	My (kgf.m)	Fx (tf)	Fy (tf)	Lado B (cm)	Lado H (cm)	h0 / ha (cm)	h1 / hb (cm)	df (cm)
P1	25x25	72.50	434.50	4.7	3.7	700	200	0.2	1.4	90	90	25	25	150
P2	25x25	274.50	434.50	3.0	2.6	400	100	0.1	0.8	75	75	25	25	150
P3	25x25	592.50	434.50	5.4	4.8	400	1000	1.8	0.7	110	110	20	30	150
P4	25x25	1004.50	434.50	7.3	6.0	800	800	1.9	1.6	115	115	20	30	150
P5	25x25	72.50	12.50	4.7	3.7	700	200	0.2	1.4	90	90	25	25	150
P6	25x25	274.50	12.50	3.0	2.6	400	200	0.2	0.8	75	75	25	25	150
P7	25x25	592.50	12.50	5.3	4.6	400	1000	1.8	0.7	110	110	20	30	150
P8	25x25	1004.50	12.50	6.0	5.0	800	800	2.0	1.6	110	110	20	30	150